

Guida rapida alla lettura delle velocità di aggancio: modem **Pirelli DRG A124G**

- 1) apri Internet Explorer (o altro browser)
- 2) digita l'indirizzo **http://192.168.1.1** e premi **Invio**
- 3) effettua il login al modem (se non li hai modificati, usa i seguenti parametri)
username = admin
password = admin
- 4) clicca su **ADSL** nel menu a sinistra e poi su **Status**

INFOSTRADA Home Logout Discus™ DRG A124G

SYSTEM
WAN
LAN
WIRELESS
NAT
ROUTING
FIREWALL
SNMP
UPnP
QoS
ADSL
Parameters
Status
DDNS
TOOLS
STATUS

Monitoring Index:

- ADSL Status Information:
 - [Status](#)
 - [Data Rate Information](#)
 - [Defect/Failure Indication](#)
 - [Statistics](#)
- Status:

	Configured	Current
Line Status	---	SHOWTIME
Link Type	---	Fast Path

 - [\[Go Top\]](#)
- Data Rate:

Stream Type	Actual Data Rate
Upstream	640 (Kbps.)
Downstream	2592 (Kbps.)

 - [\[Go Top\]](#)
- Operation Data / Defect Indication:

Operation Data	Upstream	Downstream
Noise Margin	14 dB	12 dB
Attenuation	46 dB	26 dB

Indicator Name	Near End Indicator	Far End Indicator
Output Power	20 dB	22 dB
Fast Path FEC Correction	0	0
Interleaved Path FEC Correction	370	26
Fast Path CRC Error	0	0
Interleaved Path CRC Error	2	0
Loss of Signal Defect	0	0
Fast Path HEC Error STR	0	0
Interleaved Path HEC Error	0	0
Error Per Sec.	0	0

 - [\[Go Top\]](#)
- Statistics:

Received Cells	4257049839
Transmitted Cells	1597624

 - [\[Go Top\]](#)